



## Spare part list for D0450

No	Part name	Chinese name	Specification	Q'ty	Material	price
1	Screw	十字槽盘头螺钉	M5X20-L			
2	Chuck	钻夹头	φ10mm			
3	Output shaft	输出轴				
4	Bearing	轴承	6802-2Z			
5	Retaining ring	轴用弹性挡圈	φ15			
6	Gear	大齿轮			40Cr	
7	Needle bearing	滚针轴承	HK0808			
8	Segregation	支承架			铁基粉末冶金	
9	Bearing	轴承	608-2RS			
10	Rotor	电枢总成	φ35*25			
11	Bearing	轴承	608-2Z			
12	Stator	定子总成	φ61*25			
13	Carbon brush	碳刷	5*8*12		M839	
14	Brush holder	碳刷架			H62	
15	Spring	扭簧				
16	Slot	2.8插槽				
17	Inductance	柱形电感(短)	φ4*20			
18	Inductance	柱形电感(长)	φ4*20			
19	Switch	开关 BE型	-4/1BEK 4(4)A 250V 5E4			
20	Capacitor	三角电容	0.22μF+2X2200PF			
21	Contact chip	EMC接触片			65Mn	
22	Left housing	左机壳			PA6-GF30+TPE	
23	Cable sheath	电缆护套			PVC	
24	Cable	电缆线	2X0.75mm <sup>2</sup> X2m			
25	Rubber column	橡胶柱	φ5*7.5		丁腈橡胶	
26	Change button	正反转推块			PA6-GF30	
27	Right housing	右机壳			PA6-GF30+TPE	
28	Screw	十字槽盘头自攻螺钉	ST4.2X16			