



Spare part list for PO1218

No	Part name	Chinese name	Specification	Q'ty	Material	Price
1	Stator	定子		1		
2	Tapping screw	盘头螺钉		2		
3	Bearing bush	轴承套		1		
4	Ball Bearing	深沟球轴承		1		
5	Wind screen	挡风板		1		
6	Armature	转子		1		
7	Bearing cover	轴承压盖		1		
8	Ball Bearing	深沟球轴承		1		
9	Hexagon screw	六角螺钉		2		
10	Auxiliary handle	侧手柄		1		
11	Spindle lock button	轴锁扭		1		
12	Spindle lock spring	轴锁弹簧		1		
13	Circlip for shaft	轴用弹性挡圈		1		
14	Cross screw	十字螺钉		4		
15	gear box	齿轮箱		1		
16	Tapping screw	盘头螺钉		2		
17	Ball bearing	深沟球轴承		1		
18	Circlip for shaft	轴用弹性挡圈		1		
19	Gear	齿轮		1		
20	Circlip for shaft	轴用弹性挡圈		1		
21	Ball Bearing	深沟球轴承		1		
22	Key	半圆键		1		
23	Spindle	输出轴		1		
24	Gear box cover	齿轮箱盖		1		
25	Spring lock washer	弹簧垫圈		4		
26	Pan head screw	盘头螺钉		4		
27	Polishing disc	抛光盘		1		
28	Housing	机壳		1		
29	Brand label	商标		1		
30	Warning label	警示标贴		1		
31	Rating label	参数标贴		1		
32	Brush holder	刷握		2		
33	Carbon brush	碳刷		2		
34	Brush holder cap	刷帽		2		
35	Handle	手柄		1		
36	Speed governor	调速器		1		
37	Capacitor	电容		1		
38	Inductor	电感		1		
39	Handle cover	手柄盖		1		
40	Switch	开关		1		
41	Cord clamp	电缆压板		1		
42	Cord sleeve	电缆护套		1		
43	Cord	电缆线		1		